


PureFlow® Technologies, Inc.
Home of the AirDog® Heavy Duty Diesel Fuel Systems

OPTIONAL KIT AVAILABLE (PN: SBK-1000)

Mounting the AirDog® or Champ™ to the Frame without Drilling

Determine which holes in bracket 1 that you are going to need by holding it up to the frame of your vehicle.

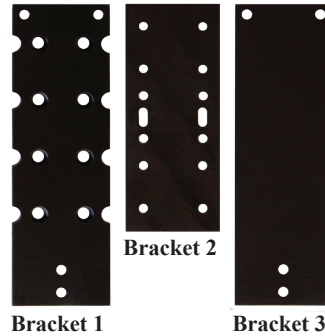


Mounting Hardware




Bracket Bolts

Use mounting hardware to mount bracket 1 to bracket 2. The position of bracket 2 can be adjusted vertically and horizontally to suit your particular needs.

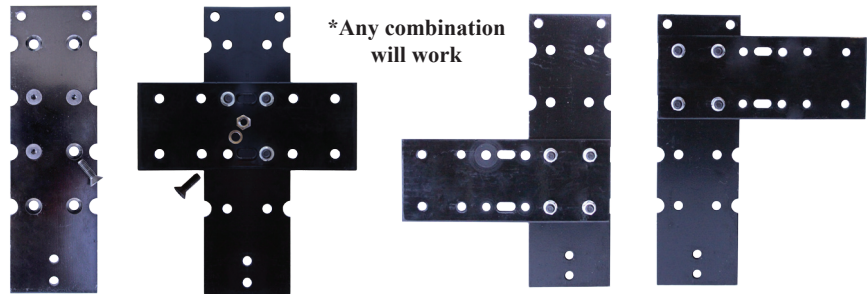

Using product mounting hardware, mount product to brackets.

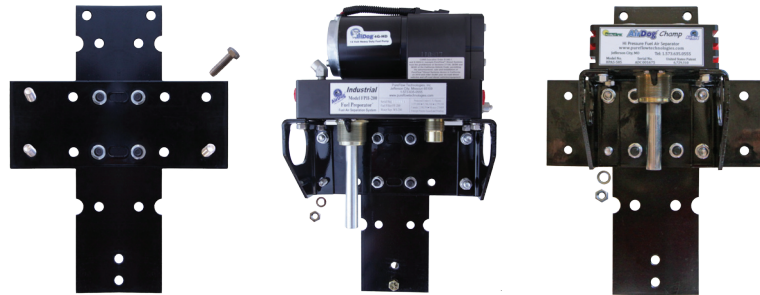

Install 2 of the frame bracket bolts in top of bracket 1 & bracket 3. Slide over frame and install bottom bolt.

Note: 3.5" and 4.5" bolts are included. Use the length best suited to your vehicle's frame width.



Tighten bolts as needed.
Install filter or filter and water separator as applicable.

