



INDUSTRIAL Fuel Air Separation System

INSTALLATION MANUAL For Trucks Equipped with CUMMINS® Signature 600 & ISX Engines



PLEASE READ
THESE INSTRUCTIONS
THOROUGHLY
BEFORE BEGINNING
INSTALLATION



Part No. **A3SPBT452**

NOW WITH DEMAND FLOW

Revised 7/31/2026



PROUDLY MADE IN THE USA

www.airdogdiesel.com
1-573-635-0555 or
1-877-463-4373

Providing "Test Cell Performance" in "Real World Conditions" Since 1993!

PATENT

www.AirDogDiesel.com/patents

AirDog[®] INDUSTRIAL Fuel Air Separation System

THE RIGHT CHOICE FOR YOUR DIESEL ENGINE

4G-HD Fuel Pump

Pump shaft, stabilized with bearings on each end, holds the gerotor in virtually perfect alignment for quiet running and extended longevity!



Low Fuel Pressure Switch and LED Indicator

Lets you know when to service the fuel filter and water separator before suffering power loss.
NO MORE GUESSING!



Bearings



LoveJoy Coupler System

The LoveJoy Coupler System is self-aligning and eliminates virtually all vibrations.



Positive Air Separation with primary air discharge port.



Drain Valve



Dual Port Pump

Balances the gerotor for quiet operation and higher flows.



Demand Flow System

Easy installation, only one small line connected to the engine return line to return air/vapor to the tank.



Protective Wire Screen

In water separator nipple.



Adjustable Regulator

For just the right fuel pressure.

6 Micron Particulate Filters
Long-Lasting MicroGlass Media

Water Separator/Pre-Filter
with Drain Valve

CARB Executive Orders D-595-5 & D-595U-6 permit the advertisement, sales and installation of PureFlow Technologies AirDog[®] Diesel Fuel Systems in California on 2020 and older model year on-road diesel vehicles and off-road diesel vehicles/equipment.

SYSTEM OVERVIEW

Welcome to the **AirDog® Heavy Duty Industrial**
Fuel Air Separation System for Class 8 Trucks

The **AirDog®**, with **ADVANCED FUEL AIR SEPARATION, DEMAND FLOW, ADJUSTABLE REGULATOR, LOW PRESSURE SENSOR with LED INDICATOR** and the **4G-HD FUEL PUMP**, is a premium fuel filtration and delivery system for the Cummins ISX and Signature 600 Diesel Engines.

Air & Vapor are compressible! When Air/Vapor is present in a fuel injection system the pressure buildup and injection of fuel is delayed while the Air/Vapor is being compressed. This delays the injection timing, causing a shorter power stroke and low power, increased fuel consumption and increased exhaust emissions. Preventing the formation of vapor from pump cavitation and removing entrained air from the fuel flow to the injectors restores **Correct Injection Timing**. Diesel engines equipped with the **AirDog®** can now perform as designed, delivering “test cell” performance while in “real world” use!

The **AirDog®** removes water, particulates and most importantly, the air that becomes entrained in diesel fuel, from the fuel flow to your engine. The entrained air and vapor that is separated from the fuel is returned to the fuel tank through a small return line. The fuel flow to the engine’s transfer pump is at a **NET POSITIVE PRESSURE**, preventing cavitation and the formation of vapor, thus overcoming the performance related problems from plugged fuel filters, high altitude operation, and torque loss at higher engine RPM’s.

All **AirDog®** products are manufactured with a personal touch, unsurpassed attention to detail, and the most stringent quality assurance!

TYPICAL INSTALLATION LAYOUT



The **AirDog®** requires only one small return line connected to the engine return line, for quick and easy installations.

TABLE OF CONTENTS

Section 1.....	Table of Contents
Section 2.....	Installation and Safety Guidelines
Section 3.....	Parts List
Section 4.....	Selecting the Best Mounting Location
Section 5.....	Mounting the AirDog®
Section 6A.....	Fittings & Fuel Pressure Sensor
Section 6B.....	AirDog® Air/Vapor Return Line
Section 6C.....	Fuel Line from Tank & to Engine
Section 7.....	Wire Harness
Section 8.....	Filter Gauge Provision (Optional)
Section 9.....	Initial Start Up
Section 10.....	Filter Service

The installation of your AirDog® can be made relatively easy by following the steps outlined in this manual, and:

1. Inventory the package components. Immediately notify PureFlow® Technologies, Inc., of any missing or damaged parts.
2. Read the installation manual completely. Understand how the system operates and the installation recommendations before beginning.
3. Proper location of the AirDog® on the vehicle is essential. Consider hazards presented to the equipment by road debris and the elements.
4. The installation recommendations and guidelines contained herein are suggestions only. Individual installations may vary.
5. Use diesel compatible thread sealer when installing fittings with NPT threads. (Loctite® 545 Thread Sealer is diesel compatible.)

DO NOT REMOVE FACTORY INSTALLED SECONDARY FUEL FILTERS. REMOVAL OF A FACTORY INSTALLED SECONDARY FUEL FILTER MAY VOID YOUR ENGINE WARRANTY.

SAFETY GUIDELINES

CAUTION: Chock the vehicle's tires to prevent rolling.

CAUTION: Disconnect the battery cables before proceeding with the AirDog® installation.

CAUTION: Wear safety glasses when operating power tools such as drills and grinders or when using a punch or chisel.

CAUTION: Do Not drill into or weld the top of the frame rail or within 1-½" of the frame rail flange on the side of the frame rail.

CAUTION: Route the fuel lines and electrical harnesses keeping them away from hot exhaust components and/or moving parts. Properly secure the fuel lines and electrical harnesses to prevent chafing using zip ties included in installation kit.

CAUTION: Do not subject the AirDog® system directly to high-pressure wash systems. Doing so may damage seals and electrical components, and such damage is NOT covered under warranty.

**If you are uncertain of any installation procedure, please call:
PureFlow® Technologies, Inc. at 573-635-0555 for technical assistance.**

NOTE: The pictures used in this manual are for example only and may not depict the exact components as found on your truck.

PureFlow® Technologies, Inc.

AirDog® FPII-200-LP

Cummins® Signature 600 & ISX


Section 3

Installation Parts List


Parts List

QTY	Description	Part Number	Image
1	Installation Manual	206-1-0452	
1	AirDog® Diesel Fuel System including: Fuel Filter FF200-MG-6 Water Separator WS200-WD	FPII-200-LP	
1	Wire Harness w/ Indicator Light & Dash Plate 1 ea Indicator Light 5G-1-1-47674 1 ea Dash Plate 201-3-0004-S-M716	5E-2-010 908-5G-1-1-47674	
1	3/8" Low Pressure Hose (Air/Vapor Return Line) - 7 ft Section	4C-1-02-05-010-7FT	
1	1- PC Mounting Bracket	001-3C-0034	

ADFK-452 Installation Kit

1	Fuel Pressure Sensor	5C-9-007-SC-06	
15	12" Zip Tie	5H-2-1-12	
1	908-5E-2-018/022 Add-A-Circuit Fuse Tap Adapters 1 ea Add-A-Circuit Fuse Tap Adapter Mini 1 ea Add-A-Circuit Fuse Tap Adapter ATO	5E-2-018 5E-2-022	
1	901-08-0100-1 Bolt Kit 4 ea 3/8-16 x 1-1/4 HHCS 4 ea 1/4-20 x 2 SHCS 908-08-0100-N Nut Packet 4 ea 3/8-16 Hex Nut 4 ea 1/4-20 Hex Nut 908-08-0100-1-W Washer Packet 4 ea 3/8 Split Lock Washer 4 ea 1/4 Split Lock Washer 4 ea 3/8 Flat Washer	1J-1-C20SZ 1L-A32C 1S-1-CSZ 1S-1-AC 1R-6-CSZ 1R-6-AC 1P-2-CSZ	

908-08-0800 AirDog® FPII Basic Fitting Kit

2	#10M JIC x 1/2 M NPTF Straight Connector	4A-1-01-10-08-S	
2	#10M JIC x #10F JICX 90° Swivel Nut Elbow	4A-2-04-10-10-S	
1	#6M JIC x 1/4 M NPTF Straight Connector	4A-1-01-A-C-SZ	
1	3/8 ID, 7/8 OD Rubber Grommet	5J-1-1-04-2758	

908-01-0452-RLFK Return Line Fitting Kit

1	Quick Connect Return Adapter Sub-Assy (1 ea) 1-1. Quick Connect Return Adapter 001-4A-1-0051 (1 ea) 1-2. 1/4 NPT w/ Vibraseal Pipe Plug 4A-3-01-A-S2 (1 ea) 1-3. 11.6 x 2.4 mm O-Ring 1U-2-1-11.6 (1 ea) 1-4. Quick Connect Retainer Clip 4C-2-00-00 (1 ea) 1-5. #6M JIC x 1/4 M NPTF Straight Connector 4A-1-01-A-C-SZ	908-VM-QCRA	
1	#8M JIC x #8F JICX x 1/4 NPTF Port GagePort	4A-1-11-08-08-4P	
1	#6M JIC x 1/4 M NPTF Straight Connector	4A-1-01-A-C-SZ	
2	#6F JICX x 3/8 Push-lock Hose Barb	4A-1-09-06-06-B	
2	#6M JIC x #6F JICX 90° Swivel Nut Elbow	4A-2-04-06-06-S	

Selecting the Best Location to Mount the AirDog®

Installing the AirDog® at the proper location on the vehicle is most important. When deciding where to locate the AirDog®, the following points should be considered:

- Best relationship to the transfer pump and the original primary fuel filter location
- Protection from the elements and road debris
- Accessibility for service

CAUTION: DO NOT mount the AirDog® directly on the engine. Mounting the AirDog® directly on the engine will immediately VOID your AirDog® Warranty!

When possible, mount the AirDog® in the same location as the original primary fuel filter.

The following examples, Figures 1 thru 4, show different AirDog® installations. There are many variations in the arrangements and the components on the various trucks. With a little ingenuity, the AirDog® can be successfully installed on any Class 8 truck.

Figure 1 shows the original fuel filter mounted on a bracket to the rear of the engine compartment and just above the frame behind the steering column.



Figure 1



Figure 2

Figure 2 shows the primary fuel filter mounted on the frame.

Selecting the Best Mounting Location

In Figure 3, the AirDog® is mounted on the original fuel filter bracket high above the frame and toward the front of the engine compartment.



Figure 3



Figure 4

The installation in Figure 4, a short nose “Day Cab” shows the AirDog® mounted on the frame on the driver’s side, behind the battery box.

Mounting the AirDog® on the Truck’s Frame

NOTE: DO NOT MOUNT THE AIRDOG® ON THE ENGINE! MOUNTING THE AIRDOG® ON THE ENGINE WILL IMMEDIATELY VOID YOUR AIRDOG® WARRANTY.

5-1. The goal is to mount the AirDog® in, or as close as possible to, the original location of the primary fuel filter. In most cases, this will allow you to use the original fuel supply lines from the tank to the engine. In many cases, the AirDog® 1-piece Mounting Bracket can be bolted into the original primary fuel filter mounting holes, requiring no drilling.

5-2. Disconnect the fuel lines and remove the original primary fuel filter.



Mounting the AirDog® on the Frame

5-3. Loosely assemble the mounting brackets and filters to the AirDog®.

5-4. Hold the AirDog®, with the bracket and filters attached, next to the frame at the selected mounting location. Check for clearance. If mounted between the frame and steer tire, turn the steering wheel fully in both directions to check tire clearance.

If you are able to use the existing primary filter mounting holes, remove the AirDog® from the 1-piece Mounting Bracket and secure the 1-piece bracket to the frame with the included hardware.

If drilling mounting holes appears necessary, proceed to Pg. 12 for the optional NDC-1000 No-Drill Mounting Kit for the AirDog® system.



5-5. Mark and center punch each hole location.



5-6. Drill a 3/8" hole at each of the 4 previously marked locations.

WARNING! DO NOT DRILL INTO OR DAMAGE ANY Wire, AIR LINES OR OTHER COMPONENTS LOCATED BEHIND THE FRAME RAIL.

Mounting the AirDog® on the Frame

5-7. Loosely assemble the 1-piece Mounting Bracket to the frame, then loosely assemble the AirDog® to the 1-piece Mounting Bracket



5-8. After mounting the AirDog® on the brackets, snug the fasteners to achieve a good relaxed fit.

5-9. Properly tighten all of the fasteners.

NOTE: These steps are necessary to prevent stress cracks from forming in the mounting brackets due to road vibration and bouncing.

Mounting the AirDog® on the original filter bracket

5-8. Remove the original fuel filter from the mounting bracket.



5-9. Attach the AirDog® 1-piece Mounting Bracket to the original filter plate.



5-10. Loosely assembly the bracket to the plate, and the AirDog® to the bracket.

5-11. After mounting the AirDog® on the bracket, snug all of the fasteners to achieve a good relaxed fit, finish tightening all of the fasteners.

NOTE: These steps are necessary to prevent stress cracks from forming in the mounting brackets due to vibration.



Assembly Instruction for Hose Barb

1. Cut hose line to length.
2. Apply oil to fitting.
3. Push fitting into line until seated.



OPTIONAL KIT AVAILABLE (PN: NDC-1000)

NO-DRILL Frame Mount Bracket Kit

Many AirDog® Fuel System installations allow the original mounting holes in the frame to be used to mount the AirDog® 1-piece Mounting Bracket. In some instances, the original holes do not line up, or do not exist, making it necessary for new holes to be installed for mounting.

The AirDog® No-Drill Frame Mount Bracket Kit provides a Flanged Clamp Plate and Locking Clamps with hardware to enable attachment of the AirDog® 1-piece Mounting Bracket to the frame without drilling holes in the truck frame.



With the slotted holes in the 1-piece Mounting Bracket, combined with several inches of vertical hole mounting options, the No-Drill Mount Bracket Kit allows for practically unlimited positioning flexibility, ensuring clearance where it is needed.



The NDC-1000 Kit also includes 2" Spacers to step the 1-piece Mounting Bracket away from the frame, in the event that there is a bolt head, air or grease fitting, or another protrusion on the frame.



**Scan here to place
your order today**

FUEL LINE OVERVIEW

The AirDog® has been engineered to eliminate fuel related problems. It is important that the fuel lines are assembled and installed properly so as not to cause fuel flow restriction.

When possible, use the fuel lines that are on the vehicle. This will reduce your installation costs and make the installation go much more quickly.

NOTE: On various Class 8 trucks, the manufacturer may use other than traditional steel braid fuel lines. These lines require special fittings. The fittings used with the original primary fuel filter are specific to the fuel lines used on the truck. When possible, mount the AirDog® in the location that will allow the use of the original fuel lines and fittings.

Inspect the original fuel lines for size, length, and condition. If the fuel lines are in good condition and the correct size and length to adequately reach the AirDog®, you may want to go ahead and use them. If any of the fuel lines need to be replaced, it is recommended that the fuel lines selected meet or exceed DOT requirements.

Fuel Supply Line: The fuel supply lines from the tank to the AirDog® and to the engine should be size 10 or, at the absolute minimum, size 8 (1/2" ID).

Air/Vapor Return Line: The AirDog® Air/Vapor return line can be connected to the engine's return line. A size 6 is adequate for the Air/Vapor return line.

Primary Fuel Filters: It is most important that there are no fuel filters between the fuel tank and the AirDog® or between the AirDog® and the engine's transfer pump to plug and cause restriction. These filters should be removed from the system as part of the AirDog® installation.

Secondary Fuel Filters: DO NOT REMOVE SECONDARY FUEL FILTERS. This is the filter between the transfer pump and the engine.

Installing the Fuel Fittings and Low Fuel Pressure Sensor

NOTE: The images below illustrate the installation of straight fittings. However, in some instances 90° fittings may be required to connect the fuel lines to the AirDog®, Therefore, for your convenience two extra 90° fittings have been included in the kit.

6A-1. Install the straight #10 JIC x 1/2" NPT fuel fitting in the AirDog® fuel port marked "ENGINE".



6A-2. Install a straight #10 JIC x 1/2" NPT fuel fitting into the fuel inlet port next to the regulator marked "FUEL IN".

Installing the Fuel Fittings and Pressure Sensor Switch

6A-3. Install the ¼” NPT x #6 JIC Male Air/Vapor return fitting into the Air/Vapor return port marked “TANK”.



6A-4. Remove the 1/8” NPT plug from the end of the pre-installed 45° fitting in the AirDog® base. Install the fuel pressure sensor into the 45° elbow.

Installing the AirDog® Return Line

Signature 600 and ISX Electric Primer/Lift Pump Overview

The early model of the Cummins Signature 600 did not have an electric Primer/Lift Pump. Because of hard start situations, Cummins adopted the use of an “Add On” electric primer pump or “Lift Pump” on the later model Signature engines. The “Lift Pump” was installed in the fuel supply line prior to the inlet to the engine and ran for approximately 2 minutes after the ignition switch is activated. When the ISX engine was developed, the electric primer/lift pump was built in to the bottom of the IFSM (Integrated Fuel System Module).

VERY IMPORTANT: The AirDog® Air/Vapor return line is connected directly to the Cummins Signature 600 and ISX engine fuel return line.

- The Quick Connect Return Adapter Sub-Assy (PN 908-VM-QCRA) accommodates the AirDog® air/vapor return line on trucks equipped with plastic fuel lines.

- The #8M JIC x #8F JICX x 1/4 NPTF Port GagePort (PN 4A-1-11-08-08-4P) and the #6M JIC x 1/4 M NPTF Straight Connector (PN 4A-1-01-A-C-SZ) accommodates the AirDog® air/vapor return line on trucks equipped with steel braided reinforced fuel lines.




VERY IMPORTANT: When the ignition is activated, the ISX primer/Lift Pump will start to pump. The AirDog® will also start to pump. the two together can produce pressures of up to 45 PSI. This will immediately trigger a high pressure fault code. **Therefore, the ISX primer / lift pump must be deactivated by unplugging the power lead.**

AirDog® Return Line

Trucks Equipped with Quick Connect Plastic Fuel Lines

6B-1A. Remove the factory quick connect fuel line, and install the provided quick connect return adapter (PN 908-VM-QCRA) into the factory fitting. **Be sure to lubricate the o-ring on the adapter and ensure the fitting is fully seated.** Then secure the fitting with the provided retainer clip.

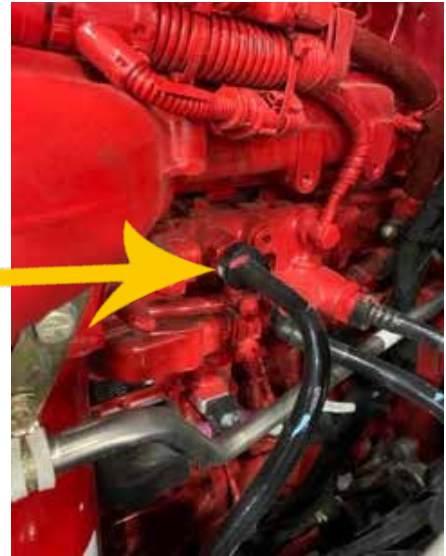

6B-1B. Install factory fuel return line into the female side of quick connect return fitting. Once line is fully seated, secure with factory retainer clip.

PROCEED TO 6B-3.

Trucks Equipped with Steel Braided Reinforced Steel Lines

6B-2A. Disconnect the factory fuel return line from the #8 JIC flare fitting located on the side of the engine and remove the original fuel return fitting.



6B-2B. Install #6M JIC x 1/4 M NPTF Straight Connector (PN 4A-1-01-A-C-SZ) into #8M JIC x #8F JICX x 1/4 NPTF Port GagePort (PN 4A-1-11-08-08-4P) Then install this Gageport Fitting Assembly onto the engine fuel return fitting.



6B-2C. Connect the factory fuel return line onto the GagePort Fitting Assembly.


AirDog® Return Line

6B-3. Measure and cut a length of fuel line necessary to reach from the AirDog® Air/Vapor return fitting to the air/vapor return fitting in the fuel return tee.



6B-4. Assemble the fuel line with the proper end fittings for the connections.

NOTE: This assembled fuel line is for illustration only. Use the proper end fittings that apply to your application!

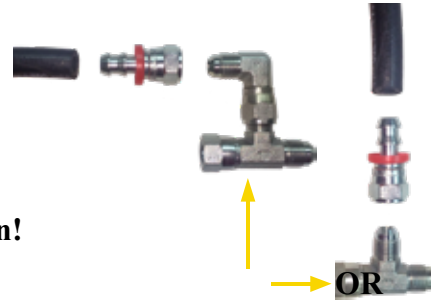

6B-5. Route and connect the Air/Vapor return line to the proper fittings on the AirDog® and the return tee. Properly tighten the fittings. Secure the fuel line with zip ties as necessary to prevent abrasion and chafing.

NOTE: This assembled fuel line is for illustration only. Use the proper end fittings that apply to your application!


6B-6. Route and connect the Air/Vapor return line to the proper fittings on the AirDog® and the return tee. Properly tighten the fittings. Secure the fuel line with zip ties as necessary to prevent abrasion and chafing.

Connecting the AirDog® to the Engine and Tank

6C-1. Connect the engine fuel line that was originally connected to the fuel filter to the fitting in the AirDog® out to “ENGINE” port.



6C-2. Connect the fuel line from the tank to the fitting in the AirDog® “FUEL IN” port.

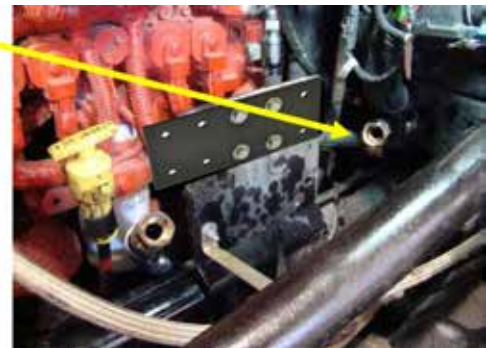

Connecting the AirDog® to the Engine and Tank on vehicles with plastic fuel lines

6C-3. Remove the fittings for the plastic lines from the original filter assemblies and install them in their respective inlet and outlet ports in the AirDog®.

6C-4. Connect the fuel line to the engine to the AirDog® fuel outlet fitting.

FUEL LINE from AirDog® TO ENGINE



FUEL LINE from TANK to AirDog®



6C-5. Connect the fuel line from the tank to the AirDog® fuel inlet fitting.

AirDog® Wire Harness

NOTE: The AirDog® wire harness includes a 15-amp fuse.

The AirDog® wire harness has a low pressure sensor and an amber LED indicator light as standard equipment. The indicator light will illuminate at start-up, remain on for a few seconds, then go off and should remain off unless pressure flow to the engine drops below minimum requirements.




Securing the AirDog® Wire Harness Relay to the Vehicle

7-1. Secure the AirDog® wire harness relay to the vehicle. This picture shows the relay mounted on the firewall.



7-2. Route the AirDog® wire harness pump motor lead and the fuel pressure sensor lead to the AirDog® unit. Connect the wire harness pump motor lead (labeled “Attach to Motor”) to the AirDog® unit pump motor lead (Figure 1).

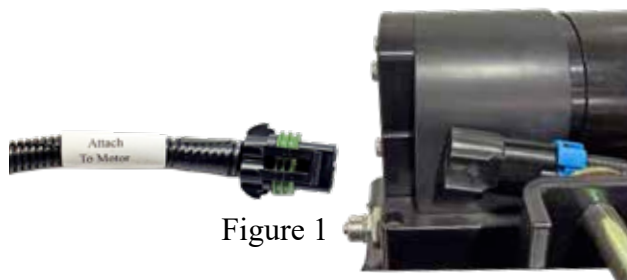

7-3. Connect the AirDog® wire harness fuel pressure sensor lead to the AirDog® unit fuel pressure sensor.



Relay Trigger Lead and Indicator Light Lead

The AirDog® Wire Harness Indicator Light lead must be routed through the firewall and to the dashboard. The Relay Trigger lead must be connected to a contact point that is electrically “HOT” when the key is in the “RUN” position. This could be either in a spare fuse holder in the fuse panel, using an Add-A-Fuse (included) to add the relay trigger lead to an existing circuit, or on the ignition switch itself.

Note: DO NOT connect the AirDog® wire harness relay trigger lead to a point that is “HOT” when the key is in the ACCESSORY position.

Routing the Indicator Light and Relay Trigger Lead through the firewall:

7-4. Many trucks have access holes through the firewall, located below or near the steering column. Remove the plug from one of those access holes, and route the wire leads through the hole. For trucks that do not have an existing hole in the firewall, you will need to drill a 5/8” hole in the firewall for entry of the leads into the cab. Use the provided grommet to seal around the wire loom.




7-5. Route the AirDog® wire harness trigger lead (red wire with no connector/plug) and indicator light lead through the firewall.

By the Steering Column



Under the Dash

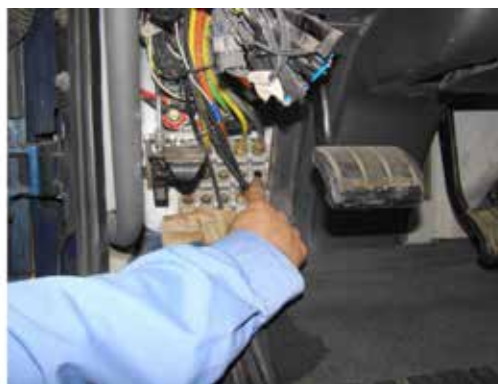


NOTE: Be sure to seal the opening or install a grommet around the wire loom to prevent water leakage and protection from chafing.

Relay Trigger Lead

This

There are several options for attaching the relay trigger wire:

7-6A. Connect the relay trigger lead to a terminal on the ignition switch that is “HOT” when the key is in the “RUN” position, as detailed in this picture:

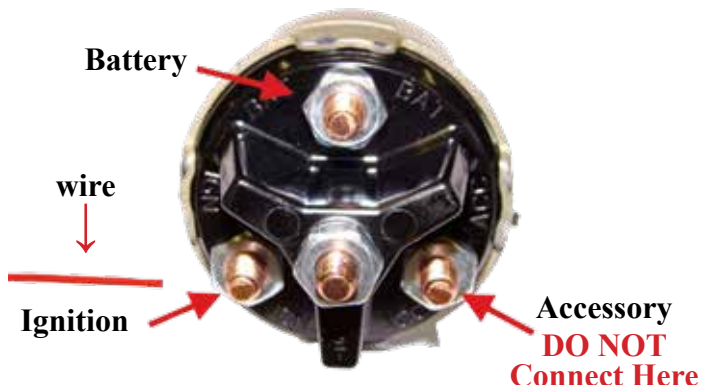


OR

Add-a-Fuse



That

7-6B. Using the appropriately sized Add-a-Fuse (included in your AirDog® installation kit), connect the relay trigger lead to a fuse holder in the fuse panel that is “HOT” when the key is in the “Run” position. An example is pictured here:

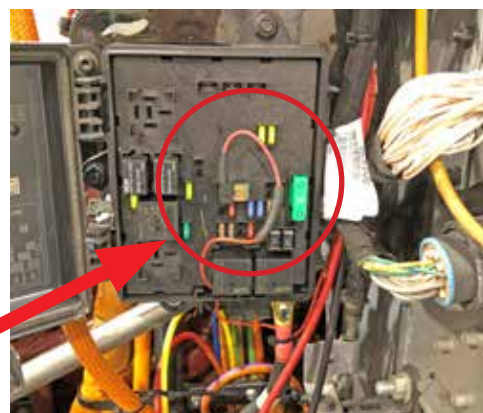

Installing the AirDog® Wire Harness Indicator Light *LED Indicator Light*

7-7. Select a location on the dash that is easily visible to the driver. Remove the dash components as necessary to access the area behind the selected location.



7-8. Drill a 7/16” hole in the dash at the selected location. Be very careful when drilling. Do not damage components located behind the dash.

Installing the AirDog® Wire Harness Indicator Light LED Indicator Light

7-9. Remove the nut from the indicator light and insert the indicator light through the dash plate. To adhere the dash plate to the dashboard, peel off the paper backing from the back side of the plate to expose the adhesive. Install the dash plate with indicator light into the hole in the dash. Reinstall the nut to the indicator light at the back side of the dash, and tighten the nut until snug.

Connect the positive (orange wire) lead of the wire harness to the positive quick-connect terminal (marked orange) on the indicator light (see image below).

Then connect the negative (blue wire) lead on the wire harness to the negative (unmarked) quick connect terminal on the indicator light.



7-10. Re-assemble the dash components back to their original position.

Connecting the Power Supply Leads

The power supply leads can be easily connected to the appropriate contacts on the battery. Another alternative option would be to connect the power supply leads to the appropriate contacts on the alternator. Any high amperage terminal that is always “HOT” is OK for the Positive + (RED) lead. Be sure the NEGATIVE - (GREEN) lead is connected to a reliable chassis ground.

IMPORTANT: On 24V systems, the power supply leads can be easily connected to the appropriate contacts on the ALTERNATOR. DO NOT connect directly to the 24V batteries.

7-11. Route the red & green power leads to the battery or an alternator. Connect the green (-) ground lead to the negative battery terminal post.

7-12. Connect the red (+) positive lead to the positive battery/alternator terminal post.



NOTE: Secure wire harness with zip ties included in installation kit.



Installing your filter restriction gauge into the AirDog® Gerotor Cap Sensor Port

Does your HD truck have a filter restriction gauge that you would like to continue using with the AirDog®?

8-1. Every AirDog® Heavy Duty Diesel Fuel System is now equipped with a port for your restriction sensor. On the inside surface of the gerotor pump cap, you will find a 1/8" NPT plug.

Port for Sensor



8-2. Remove that plug (3/16" Allen), and install your restriction sensor with the same 1/8" NPT thread, using an elbow if necessary, and you can now connect and use your original filter restriction gauge with the AirDog® system.



Initial Start Up Procedure

The AirDog® is a self priming system. However, to prevent damage to a dry seal and reduce the life expectancy of the system, it is suggested to pre-fill the water separator/pre-filter with diesel fuel to the bottom of the "NUT PLATE".

- ☐ 9-1. Rub CLEAN diesel fuel or oil on filter seals before installing to ensure a proper seal.
- ☐ 9-2. Pre-fill the water separator/pre-filter with diesel fuel up to the bottom of the nut plate.
- ☐ 9-3. Turn the starter key to the on/run position.
- ☐ 9-4. The AirDog® should now be running and pumping fuel, bleed the fuel line to the engine by loosening the fuel line connection at the engine fitting. As soon as the line is purged of air and pure fuel is observed, properly tighten the fuel fitting.

NOTE: Put a rag or shop towel over and around the fitting to prevent fuel splatter or spray. Catch all spilled fuel and dispose of properly. Wear safety glasses.

- ☐ 9-5. Start the engine.

Recheck all fuel fittings for leakage and proper torque. Be sure all fuel lines are properly routed to protect from excessive heat and secured to protect from chafing and abrasion. Recheck all electrical lines and secure as necessary.

Servicing the AirDog® Fuel Filter and Water Separator/Pre-Filter

It is highly recommended that you keep a replacement AirDog® fuel filter and water separator on-hand, ready for replacement when the AirDog® Indicator Light illuminates.

When the particulate fuel filter, water separator, mesh screen in the water separator nipple, or a combination of these, become plugged, the restriction will cause a loss in pressure and flow through the AirDog® system, which will cause the AirDog® Indicator Light to illuminate, and stay on. When the Indicator Light comes on, this indicates it is time for a filter change. It is strongly recommended that BOTH filters be changed at the same time. After changing filters, if the Indicator Light remains on, please check that the AirDog® fuel pump is running, with the key in the “RUN” position. If the pump is not running, check the fuse in the wire harness, located near the AirDog® wire harness terminals connected to the battery or alternator for power. It is possible for a restriction in flow to cause the pump to draw high amps for a short period of time, which could pop the 15A fuse in the harness. Replace the fuse, if blown. After replacing the fuse, if the Indicator Light remains on, please use the following procedure to check for debris in the water separator nipple:

- Remove the water separator from the AirDog® filter base.
- Using a 1-1/8” (29mm) deep-well socket, loosen and remove the threaded nipple that the water separator was installed on.
- Inspect the wire mesh screen inside the nipple, blow any debris out of the screen with compressed air.
- Reinstall the threaded nipple into the AirDog® filter base.
- Tighten the nipple securely with the socket and ratchet. Torque spec for the nipple installation is 35 FT-LBS.

FUEL FILTER: The AirDog® 6-micron fuel filters have a typical lifespan of 25,000+ miles, and up to 40,000 miles, as they are manufactured with a high-quality and high-capacity Micro-glass media, as opposed to a paper element. Fuel filter life is affected by many variables. In any case, we do not recommend exceeding 40,000 miles of service with a fuel filter.

When replacing the fuel filter, be sure to clean the underside of the AirDog® filter base. Rub clean diesel fuel or oil on filter seals before installing, to ensure a proper seal.

It is not necessary to pre-fill the fuel filter with fuel; the AirDog® integrated fuel pump will fill the filter and prime the system automatically. Follow the instructions on the filter for proper tightening procedures.

WATER SEPARATOR: The AirDog® water separator/pre-filters have a typical lifespan of up to 40,000 miles. Servicing of the water separator simply requires draining at regular intervals. It is suggested to check/drain the water separator weekly or as needed should you experience excessive ‘water in fuel’ conditions. Replace the water separator when the AirDog® Indicator Light illuminates, if it becomes damaged or permanently plugged, and when changing the AirDog® fuel filter. Before installing a new water separator, be sure to clean the underside of the AirDog® filter base. Rub clean diesel fuel or oil on filter seals, to ensure a proper seal. It is suggested that you pre-fill the water separator (only) with clean diesel fuel when changing filters, to assist the system with priming. Follow the instructions printed on the water separator/pre-filter for proper tightening procedures.

When tightening filters with a filter wrench, DO NOT overtighten, as doing so may damage the filters.

Caution: Be careful to prevent any contaminants from entering the water separator when replacing. Although the water separator pre-filter has a protective wire screen, any debris passing through the system could cause the Gerotor fuel pump to lock up, which can cause the in-line fuse to blow. Such a pump lock-up is not covered under warranty.

DISPOSE OF WASTE FUEL AND USED FILTERS PROPERLY TO PROTECT OUR ENVIRONMENT!





www.airdogdiesel.com
1-877-463-4373 or
1-573-635-0555

Copyright© 2016
CD Patents, LLC

All Rights Reserved

Bulletin No. 206-1-0452
Revised July 31, 2026